




RESILIENT MASONRY WALL TIES

MB01 Installation Instructions



To maintain discontinuous construction of the wall when using MB01 resilient wall ties the following installation procedure should be followed.

1. Install the tie into the first leaf of bricks so that the centre of the tie is in the centre of the cavity.
2. Install the tie into the second leaf of bricks.
3. Remove any mortar that is in contact with the isolation foam or the centre of the tie.

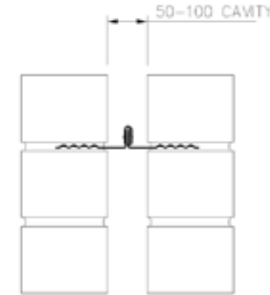

For all Installation enquiries contact Matrix Industries

www.matrixindustries.com.au

144 Oxley Island Road, Oxley Island, NSW 2430 Australia

Phone: +61 2 6553 2577 - Fax: +61 2 6553 2585

Email: info@matrixindustries.com.au